MEDI-STAT MEDICINE STATION MODIFIED

48" Wide

(9/77) P-763619-001

TABLE OF CONTENTS

Section	Paragraph	Title	Page No.	Frame No.
1		GENERAL INFORMATION	1-1	A-5
	1-1	APPLICATION AND DESIGN	i-i	A-5
2		OPERATING INSTRUCTIONS	2-1	A-6
	2-1	GENERAL	2-1	A-6
	2-2	FLUORESCENT LIGHT	2-1	A-6
	2-3	TOWEL DISPENSER	2-1	A-6
	2-4	SOAP DISPENSER	2-1	A-6
	2-5	REFRIGERATOR	2-1	A-6
	2-6	HYPNOTIC-NARCOTIC COMPARTMENT	2-1	A-6
3		PREVENTIVE MAINTENANCE	3-1	A-8
Ü	3 - 1	GENERAL	3-1 3-1	A-8
	3-2	PERFORMANCE VERIFICATION		
	3-3	CLEANING	3-1	A-8
	<u> </u>	CLEANING	3-1	A-8
4		TROUBLESHOOTING	4-1	A-10
	4-1 4-2	HELPFUL HINTS THE TROUBLESHOOTING CHART - EXPLANATION OF	4-1	A-10
		ITS CONTENTS	4-2	A-11
		TABLE 4-1. MEDICINE STATION TROUBLESHOOTING CHART	4-3	A-12
5		COMPONENT REPAIR AND REPLACEMENT	5-1	A-14
J	5-1	GENERAL	5-1 5-1	A-14 A-14
	5-2	REFRIGERATOR	5-1 5-1	
	5-3	RED WARNING LIGHT ACTUATOR SWITCH	• .	A-14
	5 - 4	HADNOTIC NADCOTIC COMPARTMENT	5-2	B-1
	5-5	HYPNOTIC -NARCOTIC COMPARTMENT	5-2	B-1
	5-6	RED WARNING LIGHT	5-3	B-2
	5-0	FLUORESCENT LIGHT ASSEMBLY	5-3	B-2
6		EXPLODED VIEWS AND PARTS LISTS	6-1	B-4
				· ·

LIST OF ILLUSTRATIONS

Fig. No.		Page No.
2-1	LOCATION OF COMPONENTS	. 2-2
3-1	PREVENTIVE MAINTENANCE	3-2
4-1	ELECTRICAL SCHEMATIC	4-4
6-1	MAJOR COMPONENTS	. 6-2
6-2	MINOR COMPONENTS	. 6-4
6-3	ELECTRICAL	. 6-5
6-4	NARCOTIC CABINET ASSEMBLY	
6-5	PLUMBING	6-8
6-6	COMPRESSOR ASSEMBLY	
6-7	REFRIGERATOR	

SAFETY PRECAUTIONS

The following are personnel (WARNINGS) **safety precautions** to be observed when operating or servicing this Medicine Station. The page or pages on which they appear in the text of this manual is indicated by the number in the lower right-hand corner of the **precaution**.

WARNING: REFRIGERANT CHARGE IS TOXIC; DO NOT ATTEMPT TO CHANGE IT.

4-1, 5-1,

WARNING: BE SURE TO DISCONNECT ELECTRICAL POWER TO THE MEDICINE STATION BEFORE PERFORMING MAINTENANCE ON ANY OF THE ELECTRICAL COMPONENTS.

5-1

GENERAL INFORMATION

1-1. APPLICATION AND DESIGN

The product literature included in this section contains factual data relating to the principal descriptive and identifying characteristics of particulars for the Modified 48" MEDI-STAT Medicine Station. The literature is informational rather than instructional. It provides and conveys, textually and illustratively, a general concept of the equipment, its purpose, capabilities, limitations, and technical specifications.

OPERATING INSTRUCTIONS

2-1 GENERAL

The following instructions are intended as a guide for servicemen to use when: (1) instructing operators in techniques designed to ensure optimum equipment performance; and (2) verifying the validity of operator complaints. Reference should be made to Section 4, TROUBLESHOOTING, if the Medicine Station is not operating properly. Refer to Section 1, GENERAL INFORMATION, for capabilities of the equipment.

Figure 2-1 shows the Medicine Station components and control in their approximate locations. It is provided as a guide to identification and location of the various items

2-2. FLUORESCENT LIGHT

To operate fluorescent light, refer to Figure 2-1 for location of self-contained, toggle-starter switch.

2-3. TOWEL DISPENSER

To Refill Towel Dispenser

- 1. Rotate pawl fasteners on each side of opening counterclockwise.
 - 2. Pull towel dispenser forward.
- 3. Slide back spring-loaded follower block, and insert fresh towels. Folded towel is 3 x 9½ inches.
- 4. Be sure that flap of first towel extends through dispenser opening.
- 5. Slide dispenser into place, and rotate pawl fasteners clockwise until snug.

2-4. SOAP DISPENSER

To Refill Soap Dispenser

1. Lift up and remove dispensing head, pump sectic γ and tubing assembly.

- 2. Fill the reservoir. It holds four fluid ounces of liquid soap. Do **not** fill above pump-support shoulder.
- 3. Reassemble dispensing head, pump section and tubing assembly.

2-5. REFRIGERATOR

To Adjust Temperature

- 1. Remove snap-in access panel.
- 2. Rotate thermostat control knob to desired setting. The refrigerator is self-defrosting but may be manually defrosted by setting the thermostat to DEFROST.
 - 3. Replace the access panel.

2-6. HYPNOTIC-NARCOTIC COMPARTMENT

To Open

- Unlock outer door. Red warning light comes on when outer door is unlocked.
- 2. Swing out door to an approximate 30 degree angle.
- Using key and grasping edge of door with other hand, gradually push door up until it is fully retracted.
 - 4. Push door up and back into opening for storage.
- Unlock inner doors and open them. Key cannot be removed from lock when it is unlocked.

To Close

- 1. Close and lock inner doors.
- 2. Remove key from lock.
- 3. Pull outer door out and down.
- 4. Lock outer door. Red warning light will go off.

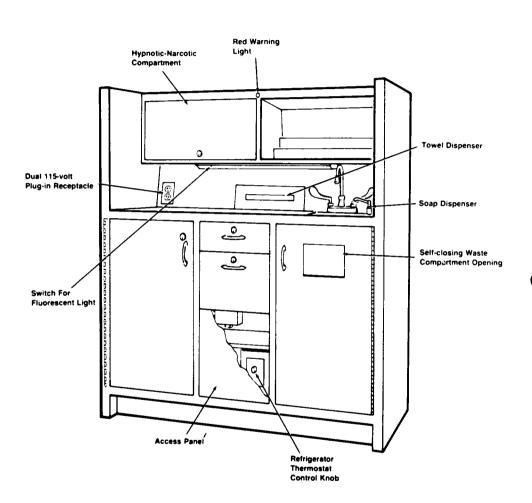


Figure 2-1. LOCATION OF COMPONENTS.

PREVENTIVE MAINTENANCE

3-1. GENERAL

The following operations with the exception of Paragraph 3-4 should be performed periodically to properly maintain a Medicine Station. The frequency, unless otherwise indicated, is determined by the usage. Refer to Section 4, TROUBLESHOOTING, should a problem occur or if the Medicine Station operation is not as described in Paragraph 3-2.

3-2. PERFORMANCE VERIFICATION

- 1. Inspect the Medicine Station for any sign of damage, poor electrical or plumbing connections or misaligned parts.
- 2. Operate the water faucet and soap dispenser and inspect the drain line (see Fig. 3-1). Be sure they do not leak or drip.
- 3. Operate fluorescent light (see Fig. 3-1). Be sure it is working properly.
- 4 Remove the snap-in access panel adjacent to the refrigerator (see Fig. 3-1). Turn the thermostat control knob to its normal operating position. Check for proper compressor operation. Be sure the refrigerator door gasket seals tightly against the door frame.
 - 5 Be sure that all locks are working properly.
- Open and close the storage drawers. Check for smoothness of operation. Be sure that all stops are so rotated as to prevent accidental drawer removal.
- 7 Be sure that the Red warning light glows when the hypnotic-narcotic compartment outer door is unlocked. Open the outer and inner doors, then depress the outer door switch with a finger. The Red warning light should go off.

3-3. CLEANING

NOTE: When using AMSCO STAINLESS STEEL CLEANER & POLISH or AMSCO PRY Cleaner, rub in a back-and-forth motion (in the same direction as the surface grain). Do not rub with a rotary or circular motion. Do not use these cleaners on painted surfaces.

Quarterly

- 1. Remove snap-in access panel and drawer directly above access panel (see Fig. 3-1).
 - 2. Remove top cover from compressor assembly.
- 3. With a vacuum cleaner wand, remove any fint or dust particles that may have become trapped in condensing-coil fins.
- 4. Clean access panel, then replace cover, access panel and drawer.
- 5. Remove any lint and dust from subbase openings beneath the refrigerator.

As Necessarv

- 1. Use AMSCO STAINLESS STEEL CLEANER & POLISH on all stainless-steel surfaces. Apply the cleaner with a damp cloth or sponge, thoroughly wipe off and then polish with a clean, dry cloth. Use AMSCO PRY Cleaner to remove stubborn stains
- 2. Use a mild detergent solution such as Calgonite (Calgon Corp.) to wash all nonstainless-steel surfaces. Rinse with tap water using a sponge or damp cloth and wipe dry with a lint-free cloth.

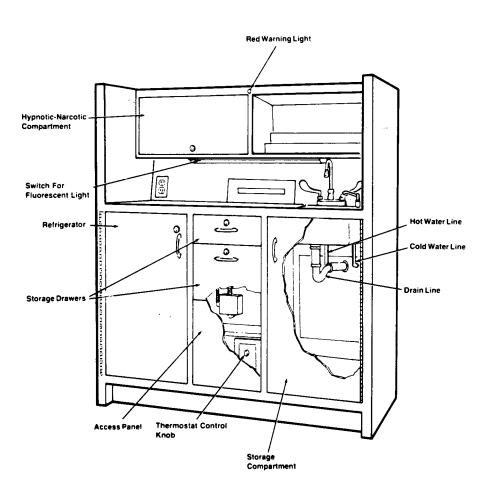


Figure 3-1. PREVENTIVE MAINTENANCE.

TROUBLESHOOTING

This section contains detailed information for locating and correcting the cause of Medicine Station malfunctions.

4-1. HELPFUL HINTS

- 1. Use the operating procedures presented in Section 2 to verify the trouble symptom.
- 2. Refer to paragraph 4-2 and the TROUBLE-SHOOTING CHART (Table 4-1) after symptom has been verified.
- 3. Use the electric schematic (Fig. 4-1) as aid in understanding system operation and how the malfunction of a specific component would affect it.
- 4. Refer to the following guide for examples of what to look for and what to do when you are doing the actual troubleshooting. Also refer to Section 5. COMPONENT REPAIR AND REPLACEMENT, if necessary.

Water Supplies

a. Be sure that building-supply valves are fully open.

- b. Be sure that supply pressure is the proper value.
- c. Inspect the entire system; correct all leaks.

Electrical System

- a. Using the electrical schematic, determine the circuit and component function. Correct all loose wires or improper connections.
- b. Inspect the individual components, and adjust, repair or replace them as necessary.

Drain

Be sure that drain line is clear; clean it if necessary.

Refrigeration System

WARNING: REFRIGERANT CHARGE IS TOXIC: DO NOT ATTEMPT TO CHANGE IT.

Do **not** attempt to repair compressor or change refrigerant charge. Have these done by a qualified refrigeration serviceman.

4-2. THE TROUBLESHOOTING CHART -- EXPLANATION OF ITS CONTENTS

COLUMN HEADING	EXPLANATION
TROUBLE	Select the problem you think is most appropriate to the particular trouble symptom.
ARE CONDITIONS AS FOLLOWS?	This column lists the specific conditions that should be checked to isolate and correct the one causing the malfunction. The conditions are presented in the order in which they would most likely have caused the malfunction. Check them in the order given. Refer to Paragraph 4-1 for what to do if the conditions are not as described. NOTE: If the symptom for a malfunction is established as mechanical, the electrical components may be omitted and vice versa.
WHERE TO FIND ITEMS IN MANUAL	Where applicable, the particular paragraph (P) or illustration (F) in which a given component may be found is provided in this area. An index number after a figure number denotes the specific component.

TABLE 4-1.

MEDICINE STATION TROUBLESHOOTING CHART

TROUBLE	ARE CONDITIONS AS FOLLOWS?	WHERE TO FIND ITEM IN MANUAL
Fluorescent Light does not operate	A. Power input (120 V) is hot B. Light switch is closed C. Fluorescent lamp is not burned out D. Ballast is energized	F6-2. 12 F6-2. 11: P4-6 F6-2. 12
Narcotic Compartment Red Warning Light does not come on when the outer door is unlocked	A. Power input (120 V) is hot B. Outer door switch is closed C. Bulb is not burned out D. Socket is energized	F6-4, 23 F6-1, 1; P4-5 F6-1, 1
3. Soap Dispenser does not work	A. Reservoir is filled with liquid soap B. Dispenser is not clogged C. Dispenser pump is operating	F6-5. 27 F6-5. 23 F6-5. 25
4. Compressor does not start when Refrigerator is turned on (NOTE : Be sure to follow WARNING and instructions in Paragraph 4-1 under "Refrigeration System.")	A. Power input (120 V) is hot B. Compressor power cord and feed line are plugged in C. Timer is operable D. Thermostat is operable	F6-3: F6-6, 3 F6-6, 8: P4-2 F6-6, 6: P4-2
5 Compressor operates but Refrigerator does not maintain set temperature (NOTE : Be sure to follow WARNING and instructions in Paragraph 4-1 under "Refrigeration System.")	A. Refrigerator door gasket is not deformed, brittle or cracked B. Condenser fan is operating properly C. Condenser coil is clean D. Timer is operable E. Thermostat is operable	F6-7. 6: P4-2 F6-6 F6-6, 1: P3-3 F6-6, 8: P4-2 F6-6. 6: P4-2

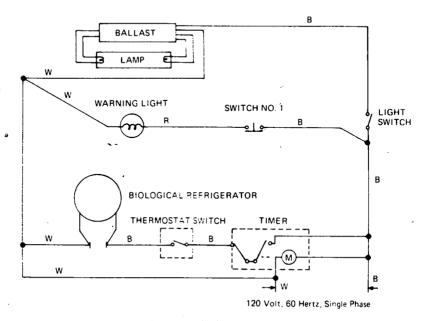


Figure 4-1. ELECTRICAL SCHEMATIC.

COMPONENT REPAIR AND REPLACEMENT

WARNING: BE SURE TO DISCONNECT ELECTRICAL POWER TO THE MEDICINE STA-TION BEFORE PERFORMING MAINTENANCE ON ANY OF THE ELECTRICAL COMPO-NENTS.

5-1. GENERAL

This section includes instructions for the adjustment, disassembly, repair, and replacement of selected Medicine Station components. Exploded views showing the various parts and assemblies referred to in this section are included in Section 6.

5-2. REFRIGERATOR

WARNING: REFRIGERANT CHARGE IS TOXIC: DO NOT ATTEMPT TO CHANGE IT.

Compressor and Refrigerant Charge

Only a qualified refrigeration serviceman should

- · repair compressor.
- replace compressor, or
- change refrigerant charge

Replacing Door Gasket (Fig. 6-7)

- 1. Lift the gasket (6) slightly to expose the 6-32 screws (11) which secure the gasket and the inside plate (7) to the door (9).
 - 2 Remove the screws, gasket and inside plate.
 - 3. Clean the area that makes contact with gasket.
- Płace new gasket on the plate, and position them on the door.

5. Secure the gasket and plate to the door with screws removed in step 2.

Adjusting Timer Cam (Fig. 6-6)

- 1. Disconnect electrical power to Medicine Station.
- 2. Remove the snap-in access panel adjacent to the refrigerator.
- 3. Rotate the thermostat control knob to OFF. Remove the knob and control housing face plate.
- 4. Rotate the cam on the timer until the notch in the cam is opposite the switch actuator (switch is actuated).
 - 5. Replace face plate, knob and access panel.
 - 6. Restore electrical power to Medicine Station.

Replacing Defrost Timer (Fig. 6-6)

- 1. Disconnect electrical power to Medicine Station.
- 2. Remove the snap-in access panel adjacent to the refrigerator.
- 3. Rotate the thermostat control knob to OFF. Remove the knob and control housing face plate.
 - 4. Disconnect and remove the timer
- 5. Rotate the cam on the replacement timer until the notch in the cam is opposite the switch actuator (switch is actuated).
 - 6. Install and connect the replacement timer.
 - 7. Restore electrical power to Medicine Station.
- 8. Temporarily replace the thermostat knob. Rotate it to its normal operating position. The compressor should start immediately. Be sure it is operating properly.
 - 9. Remove the knob and replace the face plate.
 - 10. Replace knob and access panel.

Replacing Thermostat (Fig. 6-6)

- 1. Disconnect electrical power to Medicine Station.
- 2. Remove the snap-in access panel adjacent to the refrigerator
- 3. Rotate the thermostat control knob to OFF. Remove the knob and control housing face plate.
 - 4 Disconnect and remove the thermostat.
 - 5. Install and connect the replacement thermostat.
 - 6. Replace face plate, knob and access panel.
 - 7. Restore electrical power to Medicine Station.

Repositioning Defrost Timer (Fig. 6-6)

If vibration causes the timer to malfunction (causing the refrigerator to ice up), reverse the position of the timer as follows:

- 1. Disconnect electrical power to Medicine Station.
- Remove the snap-in access panel adjacent to the refrigerator.
- 3. Rotate the thermostat control knob to OFF. Remove the knob and control housing face plate.
 - 4. Remove two screws holding defrost timer in place.
- 5. Invert the timer, making sure timer bracket is pointing upward (i.e., motor is on top); it is not necessary to disconnect any wires. Reconnect the timer.
 - 6. Replace face plate, knob and access panel.
 - 7. Restore electrical power to Medicine Station.

5-3. RED WARNING LIGHT ACTUATOR SWITCH

Replacement (Fig. 6-1)

- 1. Disconnect electrical power to Medicine Station.
- 2. Open outer door and both inner doors.
- Frem inside the narcotic cabinet, remove four screws from back wall that secure cabinet to upper section.
 - 4. Slice nárcotic cabinet forward halfway.

- 5. Remove four screws and lockwashers holding the actuator switch assembly to underside of narcotic cabinet
 - Pull down actuator switch assembly.
- 7. Remove two sets of bolts and nuts from microswitch
- Remove wire from "NC" terminal of microswitch and connect it to "NC" terminal of replacement microswitch
- Remove wire from "COM" terminal of microswitch and connect it to "COM" terminal of replacement microswitch
- 10. Assemble new microswitch to switch assembly plate with two sets of bolts and nuts.
- 11. Install actuator switch assembly to underside of narcotic cabinet with four screws and lockwashers.
 - 12. Slide narcotic cabinet back into upper section.
- 13. Tightly secure narcotic cabinet to upper section with four screws
 - 14. Close inner doors and outer door.
 - 15. Lock outer door. -
- 16. Reconnect electrical power to Medicine Station. Red Warning Light should be off.
- 17. Unlock outer door: Red Warning Light must come on.

5-4. HYPNOTIC-NARCOTIC COMPARTMENT

Replacement (Fig. 6-4)

The following compartment components can be replaced without first removing compartment:

- · left-hand, inner-door assembly
- · right-hand, inner-door assembly
- inner door lock
- outer door lock
- lock spacer

To replace the retainers, lever assemblies, bearings or outer door, the compartment must be removed as follows:

- 1. Disconnect electrical power to Medicine Station.
- 2. Open outer door and both inner doors.
- 3. Remove four 1/4-20 cap screws from inside back wall of the compartment.
- 4. Slide compartment forward until it clears the main housing.
 - 5. Any of the following components can be removed:
 - retainers
 - · lever assemblies
 - outer door
 - · after removing outer door, bearings
- 6. Slide compartment into main housing and secure with the four 1/4-20 cap screws.
 - 7. Close inner doors and outer door.
 - 8. Restore electrical power to Medicine Station.

5-5. RED WARNING LIGHT

Removal of Warning Light Assembly (Figs 6-1 and 6-4)

- 1. Disconnect electrical power to Medicine Station.
- Open outer door and both inner doors.
- From inside the narcotic cabinet, remove four screws from back wall that secure cabinet to upper section.
 - 4. Slide narcotic cabinet forward halfway.
- Pull out two wires leading to actuator switch assembly from underneath the cabinet until two wire nutsare exposed.
 - 6. Remove the two wire nuts.
- 7. Slide out narcotic $\hat{g}_{*}^{\text{trimet}}$ and place it on countertop.
 - 8. Remove defective warning light assembly.

- 9. Install replacement warning light assembly.
- 10. Lift and slide narcotic cabinet halfway into upper section case.
- 11. Using wire nuts, connect wires underneath cabinet to actuator switch assembly. Be sure to match wire colors.
- 12. Position excess wire into upper section case underneath narcotic cabinet.
- 13. Slide narcotic cabinet all the way into upper section.
- 14. Tightly secure narcotic cabinet to upper section with four screws.
 - 15. Close inner doors and outer door.
 - 16. Lock outer door.
- 17. Reconnect electrical power to Medicine Station. Red Warning Light should be off.
- 18. Unlöck öuter door: Red Warning Light must come on.

Replacement of Bulb

- 1. Unscrew red lens warning light assembly.
- 2. Remove defective plug-in type bulb.
- 3. Install replacement bulb.
- 4. Replace red lens.

5-6. FLUORESCENT LIGHT ASSEMBLY

Replacement of Assembly (Fig. 6-2)

- 1. Disconnect electrical power to Medicine Station.
- 2. Remove snap-in diffuser from fluorescent light.
- 3. Disassemble fluorescent light housing from Medicine Station by removing two 8-32 screws.
 - 4. Disconnect wiring to housing at wire nuts.
- 5. Connect wires to replacement light assembly housing using wire nuts.
- Assemble housing to Medicine Station using the two 8-32 screws.

- 7. Install snap-in diffuser on fluorescent light.
- 8. Restore electrical power to Medicine Station.

Replacement of Lamps, Switch, Ballast or Starter (Fig. 6-2)

- 1. Disconnect electrical power to Medicine Station.
- 2. Remove snap-in diffuser from fluorescent light.

- 3. Remove defective lamps, switch, ballast or starter from fluorescent light fixture.
 - 4. Install replacement component(s).
 - 5. Install snap-in diffuser on fluorescent light.
 - 6. Restore electrical power to Medicine Station.

EXPLODED VIEWS AND PARTS LISTS

Assemblies and components of the Modified Medicine Station are illustrated and identified on the following pages. The part number, the description and the quantity required for each usage is given. Each indentation in the description represents the assembly level. The UNITS PER ASSEMBLY column is specific for the given assembly or subassembly level.


Part numbers are assigned neither to parts with little or no maintenance replacement frequency nor to commercial hardware. Such parts are illustrated, however, merely to aid in the various assembly and disassembly procedures covered in this manual. Parts that are not identified should be ordered from AMSCO by description or procured locally as the situation dictatés. When ordering by description, include the part number of the assembly on which the part is located.

HOW TO USE THE ILLUSTRATED PARTS BREAKDOWN


Determine the function and application of the part required. Turn to the List of Illustrations and select the most appropriate title. Note the illustration page number.

2 Turn to the page indicated and locate the desired part on the illustration.

3 From the illustration, obtain the index number assigned to the part desired. Refer to the accompanying description for specific information regarding the part.

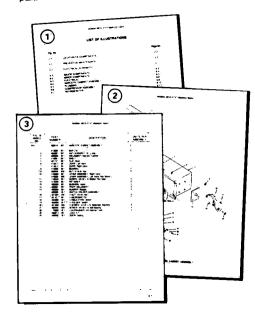

TYPICAL INDENTATION EXAMPLE

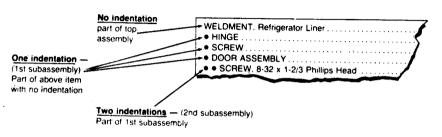

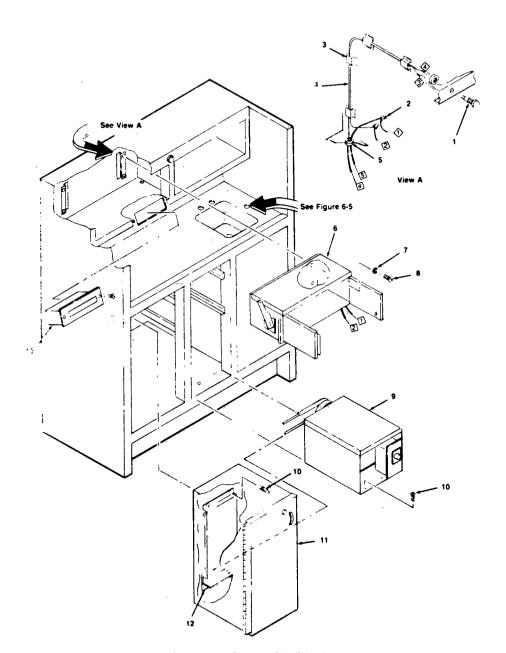


Figure 6-1. MAJOR COMPONENTS.

6-1- 1	1		PART NUMBE	R	DESCRIPTION			S PE
		P A A	451385 18538 451283 462272 77797 426510 412984 413479 467802 430064 467736 452520 452514	091 091 091 001 091 001 025 001 091 045 091	MAJOR COMPONENTS LIGHT. Warning NUT. Wire CLIP. Wire BUNDLE. Wire BUSHING NARCOTIC CABINET ASSEMBLY (see Figure 6-4) LOCKWASHER, ¼ Stainless-steel SCREW. ½-20 x ¾ Long. Stainless-steel, Round-head COMPRESSOR ASSEMBLY (See Figure 6-6) SCREW. #8-32 x ¾ Flat-head, Type I REFRIGERATOR (see Figure 6-7) TROUGH. Drain TUBING, Drain (Not Shown)	1 2 4 1 1 1 4 4 1 1 1 1		
			P A A	451385 18538 451283 462272 77797 426510 412984 413479 A 467802 P 430064 A 467736 A 452520 P 452514	451385 091 18538 091 451283 091 462272 001 77797 091 426510 001 412984 025 413479 001 A 467802 091 P 430064 045 A 467736 091 P 452520 091 P 452514 091	MAJOR COMPONENTS	MAJOR COMPONENTS *	MAJOR COMPONENTS #

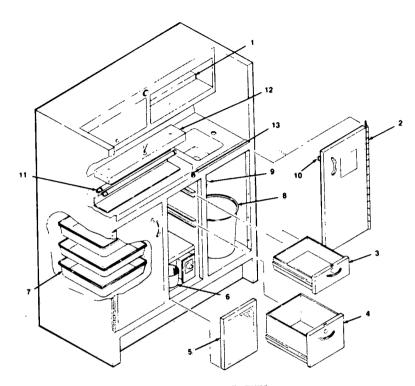


Figure 6-2. MINOR COMPONENTS.

FIG. & INDEX NO.		PART NUMBE	R I	DESCRIPTION	į		S PER
5-2-				MINOR COMPONENTS	*		
1		467700	091	RACK, Medicine	1		
2	A	460327	091	DOOR, Sink Compartment	1		
3	Α	460317	091	DRAWER			- 1
4	įΑ	461025	,	DRAWER, Storage		1 1	
5	_	460929	003	COVER, Compressor Access		1 1	
6	1 2	453090	091 ;	CUP. Evaporator	3	1 1	
7	1 5	465484	091 ;	TRAY, Refrigerator	1	1	
8 9	P	43118	091	CATCH, Roller	1	1 1	
10	P	43119	045	STRIKE	1	1 1	
11	-	412963	001	TUBE, Fluorescent — 8 Watts	2	1 1	
12	1	417797	091	FLUORESCENT LIGHT	1	1	
13	1	3,,,,	33,	SCREW 8-32	2		

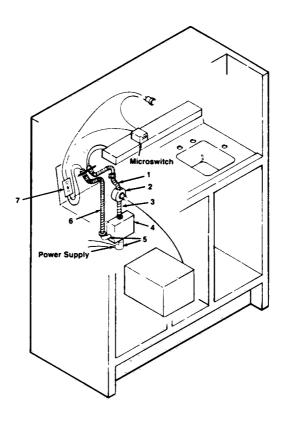


Figure 6-3. ELECTRICAL.

FIG. & INDEX NO.	~	PART NUMBEI	R	DESCRIPTION			TS PEI
6-3-				ELECTRICAL	*	1	
1	ļ	466288	020	CONDUIT. 36" Diameter x 20" Long. Flexible	1		1 1
2	Α	452661	001	BOX. Outlet	1		
3	P	451927	091	CONDUIT			
4	P	96726	091	POWER INPUT BOX ASSEMBLY	1		
5		430037	045	CONNECTOR, 90°	2	1	
6		466288	021	CONDUIT. %" Diameter x 30%" Long. Flexible	1	1	
7		23345	091	RECEPTACLE	1	1	
		23780	091	BOX, Plug-in (Not Shown)	1	1	
		430076	091	COVER. Plug-in (Not Shown)	1		1 1

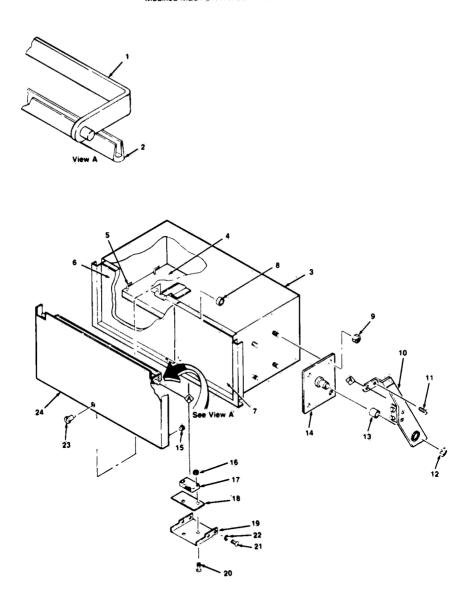


Figure 6-4. NARCOTIC CABINET ASSEMBLY.

FIG. & INDEX NO.	PART NUMBE	R	DESCRIPTION	UNITS PER
-4-	426510	001	NARCOTIC CABINET ASSEMBLY	*
1	413385	001	BAR. Tie	2
ż	454887	001	ANTI-SCRAPER, 18" Long	1
3	426509	001	WELDMENT, Narcotic Cabinet	1
4	413381	001	SHELF	1
5	431121	091	CLIP. Shelf	4
6	413311	001	DOOR. Left Hand	1
7	413312	001	DOOR, Right Hand	1
8	413383	001	BEARING	2
9	430226	045	NUT: #10-24 Kep	8
10	418028	001	LEVER ASSEMBLY, Right Hand	1
- 1	418028	002	LEVER ASSEMBLY, Left Hand (Not Shown)	1
11	118546	041	SCREW, #8-32 x 3/8 Slotted Pan-head	2
12	413403	001	RETAINER	2
13	430098	091	BUSHING, Nylon	2
14	462261	001	PIVOT WELDMENT	2
15	430053	091	BUMPER, Rubber	2
	462265	001	SWITCH HOLDER ASSEMBLY	1
16	451234	045	● NUT. #4-40 Hex	2
17	451231	091	MICROSWITCH	1
18	454899	001	INSULATION, Switch	1
19	454898		HOLDER Switch	1
20	451908	1	SCREW, #4-40 x % Slot-head Machine	2
21	430064	-	SCREW, #8-32 x % Self-tapping	4
22	79588		LOCKWASHER, #8 Internal Tooth	4
23	452813		LOCK KIT	1
24	426560		DOOR. Sliding	11
	1 420000		Doorn onding	
1				
	-			
ŀ	ļ			
	1			
	1			
1.	l			
[!			
	į			
!	1			
1				
1	1			
	1			
				: 1

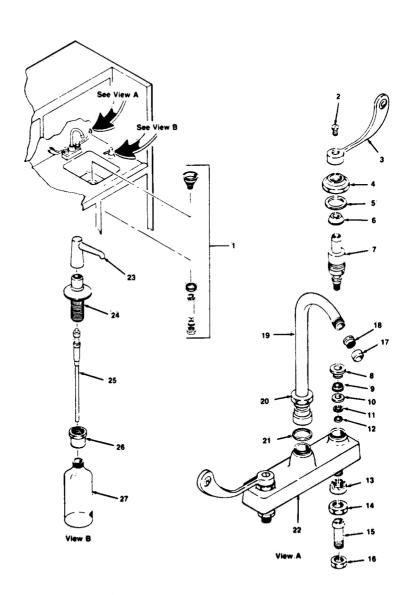


Figure 6-5. PLUMBING.

INDEX PART DESCRIPTION NO. NUMBER	UNITS PER
NO. NUMBER PLUMBING PLUMBING 1 P 430068 051 STRAINER WITH TAIL PIECE 2 422666 001 FAUCET 3 422666 005 HANDLE Cold 422666 006 CAP 422666 007 WASHER 6 422666 008 PACKING 7 422666 009 SLEEVE, Right Hand 422666 009 SLEEVE, Left Hand (Not Shown) 8 422666 009 SLAT 9 422666 010 WASHER 10 422666 011 RETAINER 11 422666 021 WASHER 12 422666 023 WASHER 13 422666 015 WASHER 14 422666 015 FAUCET 15 422666 016 NUT 15 422666 016 NUT 17 422666 019 PRETAINER, Softflo Outlet 19 422666 021 SPOUT 18 422666 021 SPOUT 20 422666 018 NUT, Spout 21 422666 017 WASHER, Spout 22 422666 017 WASHER, Spout 22 422666 012 BODY, Shanks	

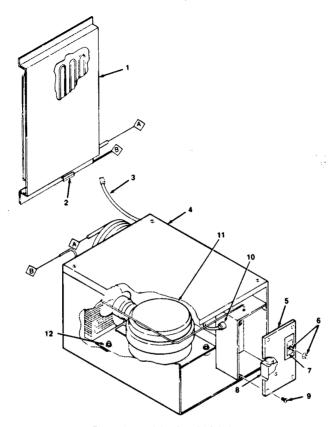


Figure 6-6. COMPRESSOR ASSEMBLY.

	NUMBE	R	DESCRIPTION		NITS PER SSEMBLY
Α	467802	091	COMPRESSOR ASSEMBLY	*	
P	467746	091	EVAPORATOR	1	1
Α	452317	091		1	!
P	460798	091		1	
M	460936	010		1	i
M	452189	010 1		1	1 1
Ρ	430332	091		1	1 '
. P	454480	001	PLATE, Dial	1	
Ρ	452229	091		1	1
	,			4	•
Ρ	452266	091	RECEPTACLE	1	1 1
P	430130	091 :		1	
P	430017	091	NUT. 34-20 Kep	4	
		A 452317 P 460798 M 460936 M 452189 P 430332 P 454480 P 452229 P 452229 P 452266 P 430130	P 467746 091 A 452317 091 P 460798 091 M 460936 010 P 430332 091 P 454480 001 P 452229 091 P 452266 091 P 430130 091	P 467746 091 EVAPORATOR A 452317 091 CLAMP, Tubing. P 460798 091 CORD AND WIRE M 460936 010 COVER, Compressor Assembly COVER, Housing P 430332 091 THERMOSTAT P 454480 001 PLATE Dial P 452229 091 TIMER SCREW P 452266 091 RECEPTACLE P 430130 091 COMPRESSOR	P 467746 091 EVAPORATOR 1 A 452317 091 CLAMP. Tubing 1 P 460798 091 CORD AND WIRE 1 M 46936 010 COVER. Compressor Assembly 1 M 452189 010 COVER. Housing 1 P 430332 091 THERMOSTAT 1 P 454480 001 PLATE. Dial 1 P 452229 091 TIMER 1 SCREW 4 P 452266 091 RECEPTACLE 1 P 430130 091 COMPRESSOR 1

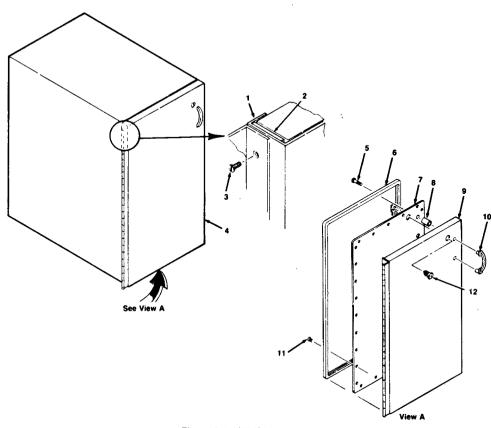


Figure 6-7. REFRIGERATOR.

FIG. & INDEX NO.		PART NUMBE	R	DESCRIPTION		UNITS PE
6-7-	A	467736	091	REFRIGERATOR	*	
1		467736	091	WELDMENT. Refrigerator Liner	1	
2	M	452494	091	• HINGE	1	
3	Р	430064	045	• SCREW	4	1 1
4	М	465570	091	DOOR ASSEMBLY	1	
5	Р	451225	045	● SCREW, 8-32 x 1-2/3 Phillips Head	2	
6	Р	452487	091	● ● GASKET	1	
7	M	452488	091	PLATE. Inside	1	
8	М	451216	091	• • SPACER	2	
9	A	462859	091	PAN WELDMENT. Outside	1	
10	Р	430061	056	• • PULL	1	
11	P	430056	045	 SCREW. 6-32 x 3/8 Oval-head Type I	13	
12		451276	056	• LOCK	1	



MEDI-STAT MEDICINE STATION MODIFIED 48" Wide P-763619-002

9/77

1 of 1

